

Use PVC Trim to Make Your Historic Entryway Epic.

The beginner-friendly wall treatment

There are many ways to build on the presence of a Victorian or any other kind of historic home. One area where you can really make a dramatic first impression is in entryways and foyers. Our Lattice PVC Trim complements the charm of those areas, and carries the same aesthetic and durable properties as all of our Royal® Decorative Mouldings. It adds visual interest without competing with more ornate elements like crown mouldings and winding staircase railings.


Our Lattice PVC Trim is the ideal detail, as it doesn't protrude beyond baseboard profiles. Plus, it's flexible enough to bend around curved walls without requiring special cuts. Follow a few simple steps to complete your own entry transformation.

ALL THE MATERIALS YOU'LL NEED:

- Royal PVC Lattice
- 13/32-in x 8-ft white hard unfinished chair rail moulding
- Compound miter saw
- Cordless brad nailer
- Level
- Paintable white caulk
- Spackle
- Tape measure
- Pencil

Step 1

Measure your first two pieces of moulding and nail them to the wall using a brad nailer. Then add the top and bottom pieces, making sure everything is level and square.

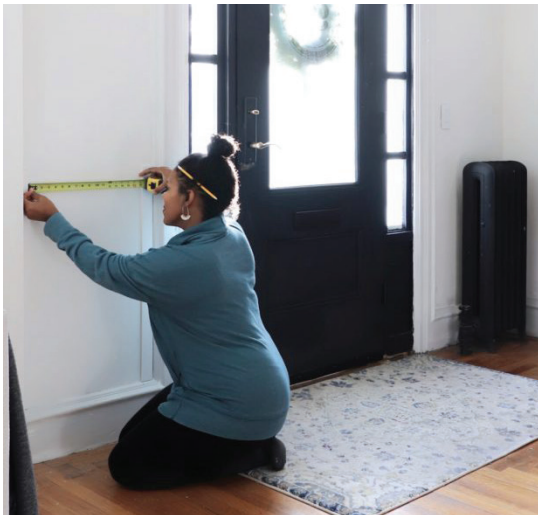

Step 2

Measure the inside of the square to add decorative trim. Miter at a 45-degree angle like a picture frame and nail to the inside perimeter of your rectangle.




Step 3

Caulk the seams and spackle the nail holes. After the door wall is complete, move on to the stairway wall.



Step 4

After installing the trim and filling the seams and nail holes, paint with two coats of your favorite complementary semi-gloss shade.

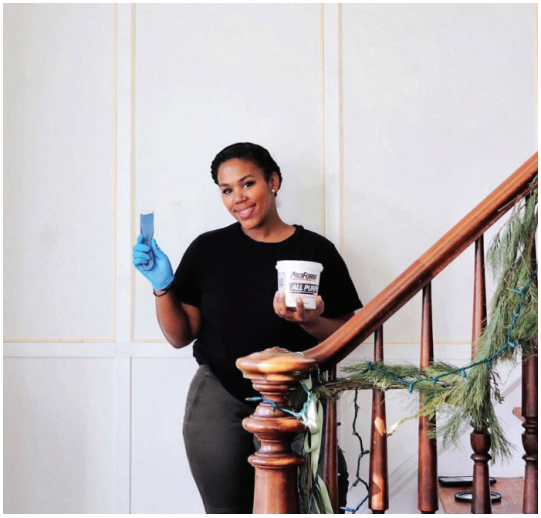

Royal® Building Products
1.855.ROYAL85

For product warranty details, please visit RBPWarranty.com

© 2020 Royal Building Products